## **APPLICATION**



Step 1: place metal tin shell in left mold. Then place circular printing paper on metal  $_{\rm t}$ in shell. The paper size should be the same size to the plastic film.




Step 2: place plastic film on circular printing paper. Then sliding mold slide, place plastic pin badge on right mold.



Step 3: press down the handle. Make sure there will be some gap in the upper mold when you press the left mold.



Step 4: sliding mold slide, press down the handle. There must be no gap in the upper mold when press the right mold.

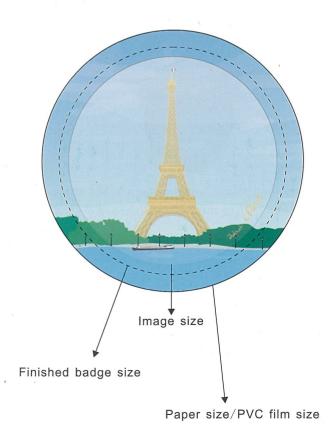

	i	1	
Badge	Image	Finished	Paper size
size	size	badge size	PVC film size
25mm	22mm	25mm	35mm
32mm	29mm	32mm	44mm
37mm	33mm	37mm	48.5mm
44mm	40mm	44mm	54mm
50 mm	45mm	50mm	60.8 mm
56 mm	51 mm	56mm	66 .5mm
58mm	53mm	58mm	70mm ,
75mm	70mm	75mm	86mm